

Armrest Height Adjustment

Height adjustment procedure
Pull the lever upwards and find the required position.



Lumbar Support Adjustment

Lumbar support adjustment procedure
Pull or push the lumbar support upwards or downwards to find the required position.



Seat Depth Adjustment

Seat depth adjustment procedure
Pull out the seat cover right lever and glide forwards or backwards.



Armrest Expand Adjustment

Expand adjustment procedure
Push the lever down and find the required position - pull the lever up to lock.




Armpad Slide Adjustment

Armpad sliding procedure
Push the armpad button and pull forwards, backwards, in and out to find the required position.



Armpad Rotate Adjustment

Armpad sliding procedure
Push the armpad button and push round to find the required position.

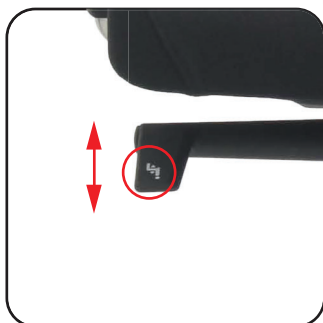

Chair Height Adjustment

Height adjustment procedure
Pull the right lever and find the required position



Back Tilting

Locking procedure
Find the required position and push the left lever downwards.

Unlocking procedure
Pull the left lever upwards and give pressure on the backrest.